Notice
For the need of technical improvement and system upgrade,
information contained herein may be subject to change
from time to time without prior notice.

Copyright©2008
All Rights Reserved.
Manual Edition 1.2, Jan, 2008
Printed in China

Edifier
www.edifier.com
EDIFIER INTERNATIONAL LIMITED
Made in China

Edifier

English

iF330 Plus Portable Audio System for iPod and MP3 Players

User's Manual

Please carefully read this manual before operating the system

IMPORTANT SAFETY INSTRUCTION

Thank you for purchasing this Edifier product. For generations, Edifier tries to provide powered speaker products to satisfy the need of our end customers, even the most demanding ones. This product can add to your home entertainment, personal computer, and mini home theater great sound performance. Please read this manual carefully to obtain the best of this system.

The lightning flash with arrowhead inside the triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of a sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

To prevent the risk of electric shock, do not remove cover (or back) No user-serviceable Parts inside. Refer envicing to qualified Service personnel only.

The exclamation point inside the triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

SAFETY INSTRUCTIONS

Please read all the instructions herein.
Please heed all safety warnings.
Please adjust the volume control to a comfortable level to avoid damaging your hearing and the system.

Please retain this manual safely for future reference.
Please install in accordance with the manufacturer's instructions.

- Do not expose this apparatus to rain or moisture.
- Do not use the speakers near water, and do not immerse them in any liquid or pour any liquid on them.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- For added protection during lightning storms, unplug the speakers from the electrical outlet and turn off the computer.
- Unplug this apparatus when unused for long periods of time.
- Place the speakers away from all heat sources, such as heaters, stoves, and direct sunlight.
- Do not block the openings in the speaker cabinets. Never push objects into speaker vents or slots. Prevent risk of fire or electric shock hazards, and provide sufficient space around the speakers for proper ventilation.
- Place the speakers in a stable location so that it will not fall causing damage to the speakers or bodily harm.
- Unplug the speakers from the computer and from the electrical outlet before cleaning them with a damp cloth.
- Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. Refer all servicing to qualified service personnel only.
- Use the plug or the coupler inlet to disconnect with mains.

Unpack the box

Box content

- Speaker
- Power adapter
- Remote controller
- 9 pcs dock adapter for iPod
- 3.5mm to 3.5mm connector cable
- User's manual

Power adapter

3.5mm to 3.5mm connector cable

Remote controller

User's manual

Speaker

iPod dock adapters
Dock adapters for iPod mini,
4th Generation iPod 20G,
4th Generation iPod 40G, iPod Photo 20G/30G,
iPod Photo 60G, iPod nano,
2nd Generation iPod nano, iPod Video 30G,
iPod Video 60G/80G.

Note: Refer to the markings under each dock adapter for use.

Illustrations and Functional Depict

1. Speaker
2. Power indicator
3. Volume control
   - Push in/out the button to power off/on the system
   - Rotate the knob to adjust the volume
4. Left channel speaker
5. Right channel speaker
6. iPod dock drawer
7. Dock adapter for different iPod
8. Foldable speaker stand to optimize sound effect
9. Battery compartment: for 6 pcs AA batteries,
   Ni-MH rechargeable batteries also applicable
10. Video output: for iPod video 30G/60G/80G
11. AUX input
12. Power adapter

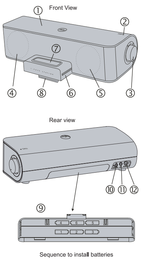

Sequence to install batteries

Making connections

Refer to the illustration above for details.

1. Please install 6 pcs of AA batteries before using the product on-the-go.
   Please make sure polarity of the batteries is correct. A.C. power adapter is needed for using this product at home.
2. Pull out the docking drawer and dock your iPod with correct dock adapter.
   Use the foldable stand to improve the sound quality.
3. While iPod is docked, menu navigation of it is accessible either by operating the touch sensible pad on iPod itself or by operating the remote controller. Refer to Guidance for using remote controller

Guidance for using remote controller

Point the remote controller to the IR window on wired controller when operating the remote controller. The optimum operational distance is 7 meters. When a remote command is received and executed, power indicator on speaker will blink.

1. "⏻" – STBY/ON key
   Press this button to set the system on / STBY.
   The system can recall the volume from last power off;
   turn off the main power when unused for a long period of time.
2. "⏯" – Play/Pause key
   Press this button will make the iPod start to play the song currently selected.
3. "⏭"– FF/Next track
   Press this button will direct the iPod jump to the next track;
   press and hold this button to fast forward within the current track.
4. "⏮" – FR/Previous track
   Press this button will direct the iPod jump to the previous track;
   press and hold this button to fast rewind within the current track.
5. "VOLUME +/-" keys – Adjust the master volume
   Press the two buttons to increase / decrease the master volume.
6. "MENU" key
   Equivalent to the "MENU" key on iPod
7. "SELECT" key
   Equivalent to the select key in the center of the circular touch sensitive pad on iPod
8. "UP" / "DOWN" keys
   Press these two buttons to move the highlight band on iPod screen upward or downward

Note: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

Specification

Power output:	RMS 2 x 6W (THD+N =10%)
Signal to noise ratio:	≥85 dBA
Distortion:	THD+N≤0.5%
Input type:	iPod connector, 3.5mm stereo jack
Input impedance:	10K ohm
Input sensitivity:	680mV ± 50mV
Adjustment:	Master volume control, STBY/ON switch on system and wireless remote controller; extended iPod play control on wireless remote controller
Bass unit:	2 x 2.75 inch, magnetically shielded, 8ohm
Dimension:	300 x 90 x 120mm (W x H x D)
Gross Weight:	Approx 1.7 kg

Warnings:
Please do not feed powered signal from another amplifier into the input ports of this system!
Please adjust to a comfortable volume to avoid damaging your hearing and the system!
Dangerous voltage inside the subwoofer enclosure, please do not open the chassis.
Refer to qualified personnel for servicing.
Please remove the power plug if the system is unused for long period of time.
Please do not expose the system in rain or moisture environment.
Please do not place vase or utensil full of liquid on the speaker.

Troubleshooting

■ **Not all speakers function:**
Please first check if the speaker wires are connected securely; then check if the Line-in connectors are reversed; check also if the audio source is at fault.

■ **One satellite speaker does not function when playing CD from computer:**
This kind of phenomena is prone to happen on new computer systems that one satellite does not function when playing CD, but system works fine when playing WAV formatted files. This is mainly due to the fault connection of CD-ROM and sound card, that one channel of signal is shorted to the ground. Please refer to the manual of CD-ROM and sound card to adjust the wire connection.

■ **System does not work at all**
1. Please check if power is connected, and if the wall outlet is switched on.
2. Please check if the amplifier is still in STBY mode
3. Please check if the master volume is turned to minimum
4. Please check if the audio input cable is connected correctly
5. Please check if there is signal from audio source

■ **Noise coming from speakers**
Amplifier circuitry of this product generates little noise, while the background noise of some VCD/DVD player or computer sound card are too high. Please keep the system in active mode and remove the audio source, if no sound can be heard at 1 meter away from the system, then there is no problem with this product.

■ **Magnetic interference**
This system is complete magnetically shielded, and can be placed near TV or monitor.
But since magnet of the subwoofer driver is large, some magnetism leakage is inevitable when the system is too close to the monitor, and it is recommended to keep a 1 meter distance between the speaker system and monitor or TV set.

☎ **If you have any further questions or concerns regarding Edifier Products**
Please visit our website at: www.edifier.com, or email Edifier Support for further assistance at: main@edifier.com, If you prefer, you may contact us by phone, Toll Free: 1-877-EDIFIER (334-3437).